

Number	Name
00	Alto Sax 1
01	Alto Sax 2
02	Tenor Sax 1
03	Tenor Sax 2
04	Baritone Sax 1
05	Baritone Sax 2
06	Soprano Sax 1
07	Soprano Sax 2
08	Jazz Clarinet
09	Jazz Flute
10	Harmonica
11	Panpipes
12	Piccolo Trumpet
13	Harmon Trumpet
14	Trumpet
15	Cup Mute Trumpet
16	Ballad Trombone
17	Trombone
18	Cup Trombone
19	Pop Brass Section
20	Classical C Flute
21	Classical Oboe
22	Classical English Horn
23	Classical Clarinet
24	Classical Bass Clarinet
25	Classical French Horn
26	Classical French Horn Bells
27	Classical Bassoon
28	Trumpet Ensemble
29	Trombone Ensemble
30	Hard Alto Sax
31	Soft Alto Sax
32	Hard Tenor Sax
33	Soft Tenor Sax
34	Hard Baritone Sax
35	Soft Baritone Sax
36	Hard Soprano Sax
37	Soft Soprano Sax
38	Sax Section 1
39	Sax Section 2
40	Muted Brass Section
41	Woodwinds Section 1
42	Woodwinds Section 2
43	Woodwinds Section 3
44	Trumpet n Mute
45	Wide Trumpets
46	Classy Brass Section
47	Classic Square
48	Classic Triangle
49	Reece

Number	Name
50	B3 Organ Thin
51	B3 Pinball Wizard
52	B3 Hard Attack
53	B3 B3 Classic
54	Rock Organ
55	Drawbar Organ
56	Raunchy Lead 3
57	Raunchy Lead 1
58	Angry Organ
59	Raunchy Lead 2
60	Triangle to Pulse
61	Happy Organ Wide
62	Square MW Growl
63	Saw MW Growl
64	Bubbler
65	Partial To You
66	Thick Octaves
67	Mono Edge
68	Aggro Pluck
69	Accordingly
70	Big Brasser
71	Fat and Foamy
72	Forment Bass
73	Mod Sinker
74	Ye Ol Brass
75	Dual Quack
76	Square Stack
77	Ducky
78	Try Me
79	Spectral Move
80	Vocal Oh Bass
81	Electro Rezo
82	Nsync
83	Classic Rez Saw
84	Classic Sine
85	Blade Runner
86	Ana Synth
87	Big Woop
88	FM Synth
89	Vowel Synth 1
90	LFO Squares
91	Thin Pulse
92	Stereo Filters
93	Fifths Saws
94	Twisted Flute
95	Wide Fuzz
96	Vowel Synth 2
97	Feed Me
98	Mono Brazz
99	Brassy Synth

Note: These are Programs in the Preset Bank. User Bank Programs are identical by default but can be edited.